



Products for the Creative Mind®



Special Features Guide

Grids

Impression1400™ Inspire800™ Flare100™ Art Projectors

Product Number:
US 225-810
UK 225-811
EU 225-812
AU 225-813



Product Number:
US 225-510
UK 225-511
EU 225-512
AU 225-513

Product Number:
US 225-100
UK 225-101
EU 225-102
AU 225-103





Grids

Each projector includes 24 frames of grids and patterns that can be used alone, or projected over an image.

Select **GRID** on remote; press ◀ or ▶ to select grid. ▼ to **color** ◀ or ▶ to select grid color. **CLOSE**.

OR, in the main menu, go to **SETTINGS ▶ GRIDS** and select grid pattern and color. **EXIT**.

*To use grids alone, exit to the "no signal" screen. Then select **GRIDS** on the remote. Choose a black or gray grid pattern. Push **BLANK** to see your work without the grid pattern.*

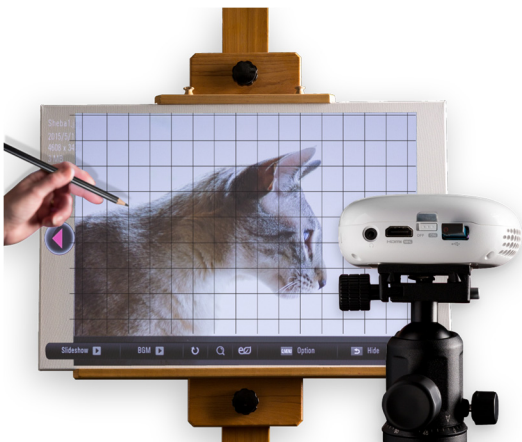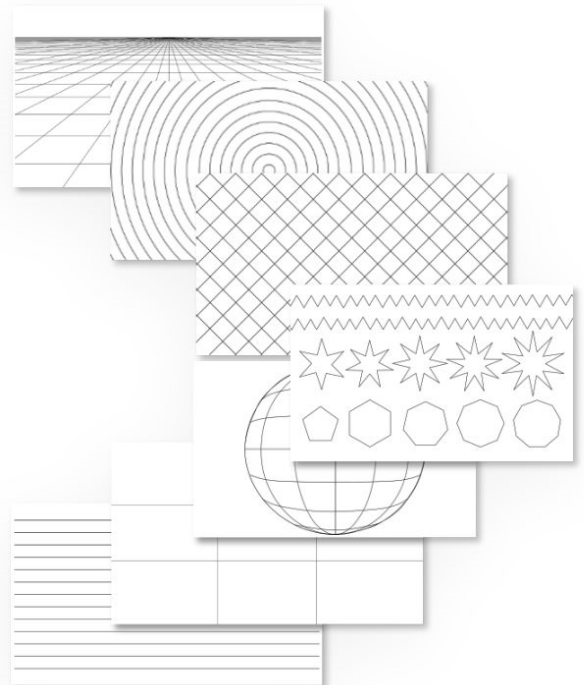

Flare100
Suggested Use

???



www.artograph.com

763-553-1112

888-975-9555

service@artograph.com

For more information on the features and functions of your new digital Art Projector, visit our website:
www.artograph.com/projectors



Products for the Creative Mind®

525 9th Street South
Delano, MN 55328-8624 USA



Products for the Creative Mind®



Impression1400™
Inspire800™
Flare100™
Art Projectors

Special Features Guide Keystone / Edge Adjust

Keystone Control

Flare100 & Inspire800 only

When set to Auto Keystone (**SETTINGS ► OPTION2**), vertical adjustment is automatic if the projector is tilted relative to vertical surface. Turn off to use manual keystone control.

Manual keystone: On remote adjust vertical keystone **KEY.S▲** / **KEY.S▼**

Flare100 and Inspire800 horizontal keystone is adjusted by moving the projector left or right until the image is squared.




Edge Adjust—Keystone Skew Control

Impression1400 only

Edge Adjust lets you adjust each of the corners of the four corners of your image independently, for skew and angle control. Go to the **Edge Adj.** button on the remote OR, in the main menu, go to **SETTINGS ► OPTION2 ► Edge Adj.** Pull or push each corner to the position needed, then go to your image.

The Edge Adj. must be set before going to a USB image.

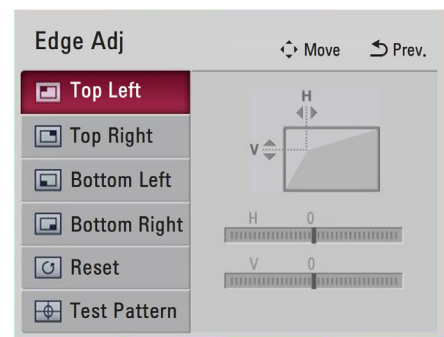

www.artograph.com

763-553-1112

888-975-9555

service@artograph.com

For more information on the features and functions of your new digital Art Projector, visit our website:
www.artograph.com/projectors



Products for the Creative Mind®

525 9th Street South
Delano, MN 55328-8624 USA



Products for the Creative Mind®



Impression1400™
Inspire800™
Flare100™
Art Projectors

Special Features Guide

Grayscale / Blank / Rotate

Grayscale

USB source: On remote, select **Q.MENU ► Set Video** using the arrow keys on the remote, scroll to Color; adjust color down to zero.

All other devices: Select **SETTINGS ► OPTION2** using the arrow keys on remote, scroll down to **Grayscale** and turn on or off.

Grayscale is useful for tonal evaluations, also edge and contrast detection of areas.

Blank

Press **BLANK** on remote to blank out image and see your work. **BLANK** again to restore.

Rotate—USB source only

Preview image. Push **OK**. On menu bar at bottom use arrow key to select ↻.

Push **OK** to rotate image 90°. **OK** again to rotate more. Press ↵ to exit.

*TIP: Use custom picture settings **EXPERT 1** and **EXPERT 2** to preset grayscale or high contrast image settings so you can easily switch between image views while you work. See full Owner's Manual on the CD for detailed instructions.*



www.artograph.com

763-553-1112

888-975-9555

service@artograph.com



Products for the Creative Mind®

For more information on the features and functions of your new digital Art Projector, visit our website:

www.artograph.com/projectors

525 9th Street South
Delano, MN 55328-8624 USA



Products for the Creative Mind®



Special Features Guide Flip/Reverse / Zoom

Impression1400™
Inspire800™
Flare100™
Art Projectors

Flip / Reverse

Turn off Auto Keystone (**SETTINGS ► OPTION2**). If using USB, push **EXIT** first.


Push **SETTINGS ► PJT Mode**.


Choose **Front** for normal. **Front Ceiling** for vertical flip, **Rear** for horizontal flip, and **Rear Ceiling** for both vertical & horizontal flip.

Zoom—USB source only

*Set your zoom level and selection last
in your image setup!*

Select **OK** on remote to open bottom menu.

▼ to menu. ► to 

 on remote to set zoom amount.

◀▶▲▼ to position image.

*The first zoom step may be large as the projector resizes
the image first to its native resolution:*

Flare100—854x480

Inspire800—1280x800

Impression1400—1920x1080

www.artograph.com

???



763-553-1112

888-975-9555

service@artograph.com

*For more information on the features and functions of
your new digital Art Projector, visit our website:
www.artograph.com/projectors*



Products for the Creative Mind®

525 9th Street South
Delano, MN 55328-8624 USA



Products for the Creative Mind®



Special Features Guide Package Contents

Impression1400™
Inspire800™
Flare100™
Art Projectors

Package Contents

- Projector
- Remote control with batteries
- Power cord
- HDMI cable
- USB multi-card reader
- USB flash drive
- Storage bag
- Tripod spacer (*Inspire & Impression only*)
- Composite connector (*Inspire & Impression only*)
- Component connector (*Impression only*)
- Warranty information
- Print manual—QuickStart (English)
- CD manual—Full manual (multi-language)



www.artograph.com

763-553-1112

888-975-9555

service@artograph.com

*For more information on the features and functions of
your new digital Art Projector, visit our website:*
www.artograph.com/projectors



Products for the Creative Mind®

525 9th Street South
Delano, MN 55328-8624 USA